


Product Name :
Accelerated Aggregate Polishing Machine

Product Code :
TEST5067RFQLAB-0018

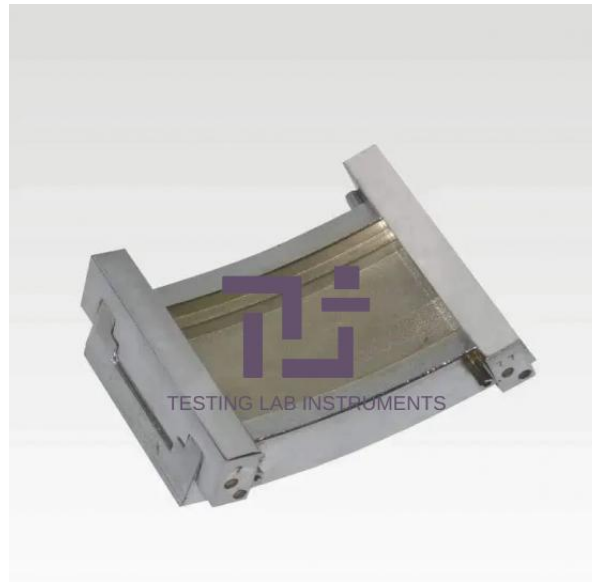

Description :

Accelerated Aggregate Polishing Machine

Technical Specification :

Used for polishing the road aggregate specimens for determining the polished stone value.

It consists of :-

A road wheel suitable for clamping 14 road stone specimens on its periphery.

A rubber tyred wheel fitted with a lever system to exert a load of 40 kgf. on the road wheel.

An electrically operated vibrating hopper unit for feeding emery powder over the road wheel.

A water reservoir for feeding water into hopper.

Seven moulds for the preparation of samples.

Suitable for operation on 220v, 50 Hz, single phase supply.

We are a leading manufacturers of Accelerated Aggregate Polishing testing equipment for a range of industries, including materials science testing lab. We offer full range of Accelerated Aggregate Polishing testing equipment, including Accelerated Aggregate Polishing testing kit, Accelerated Aggregate Polishing testing machine, Accelerated Aggregate Polishing testing tools, Accelerated Aggregate Polishing test equipment, Accelerated Aggregate Polishing test machines, Accelerated Aggregate Polishing for Lab Testing Instruments. We are suppliers of materials testing tools and equipment for the construction industry. Our mission is to provide reliable, accurate, and easy-to-use Accelerated Aggregate Polishing testing equipment that helps customers build better, safer, and more sustainable infrastructure.



Testing lab instruments India