


**Product Name :**  
Proctor Penetrometer Spring Type

**Product Code :**  
TEST5003RFQLAB-0002

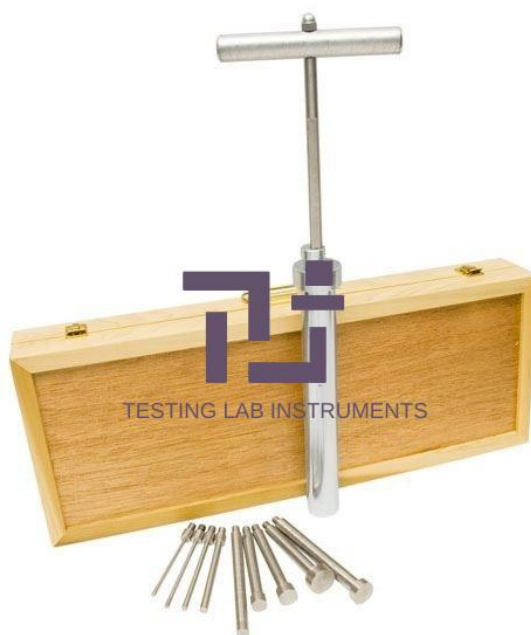

**Description :**

Proctor Penetrometer Spring Type for Testing Lab Equipment Tender Suppliers India

**Technical Specification :**

Designed for use in the field for controlling soil compaction by initial calibration from laboratory tests for moisture density relationship. The instrument consists of a barrel housing a spring.

A piston compresses the spring and the piston rod is calibrated upto 40 kg in 1 kg divisions. Two penetration stems which can be attached to the other end of

the spring barrel, one at a time, to suit the needle point being used, are graduated in 1.25 cm divisions.

Supplied with eight needles of 6.0, 5.0, 3.0, 2.0, 1.5, 1.0, 0.5 and 0.25 cm<sup>2</sup> area. Complete in a wooden box.

We are a leading manufacturers of Proctor Penetrometer Spring Type testing equipment for a range of industries, including materials science testing lab. We offer full range of Proctor Penetrometer Spring Type testing equipment, including Proctor Penetrometer Spring Type testing kit, Proctor Penetrometer Spring Type testing machine, Proctor Penetrometer Spring Type testing tools, Proctor Penetrometer Spring Type test equipment, Proctor Penetrometer Spring Type test machines, Proctor Penetrometer Spring Type testing Instruments. We are suppliers of materials testing tools equipment for the construction industry. Our mission is to provide reliable, accurate, and easy-to-use Proctor Penetrometer Spring Type testing equipment that helps customers build better, safer, and more sustainable infrastructure.

---

## Testing lab instruments India

